



MILK FROTHER

INSTRUCTION MANUAL




VISIT OUR ONLINE STORE: www.grinderscoffee.com.au
Grinders National Sales Centre Ph: 1300 476 377



SAFETY INSTRUCTIONS

Read the following instructions carefully to prevent the risk of accidents and damage to the appliance.

- This appliance is designed for use in domestic, residential and other similar applications such as hotel rooms and small office & workplaces.
- The appliance must only be used to froth and heat milk. Any use different from that covered by these instructions can result in injury and voids the warranty. The manufacturer declines any liability for damage resulting from improper use of the appliance.
- After removing the packaging, check that the appliance is not damaged. In case of damage, or at the first sign of fault (unusual noise or odours), or if any problem occurs inside the appliance, do not use it. Contact our Grinders National Sales Centre.
- The packaging elements (plastic bags, etc.) are potential hazards and must not be left within reach of children.
- Only use the appliance if the power cord is intact. To replace a damaged cord, contact our Grinders National Sales Centre. Danger of death caused by electric shocks.
- The appliance should only be used and stored indoors. Make sure the electrical elements, plugs and cords are dry. Never immerse the appliance.
- Protect the appliance from sprays and drips. Water and electricity together create a risk of electrocution.
- Only connect the appliance to approved power sockets. Make sure the mains voltage matches that shown on the data plate located on the bottom of the appliance.
- The surface on which the appliance is installed must be level, solid, stationary and heat resistant; the support surface must not slope more than 2°.
- Do not allow the appliance to be used by children under the age of ten or by people with impaired sensory awareness, unless they are carefully supervised and instructed by a person responsible for their safety. Children must be supervised to prevent them from playing with the appliance.
- Do not leave the power cord near hot surfaces and sharp edges or objects.
- Never remove parts of the appliance while it is on. Do not insert anything in the openings. This could cause electric shocks. Any operation not described in this instruction manual must be referred to our Grinders National Sales Centre.
- Grip the plug without pulling on the cord to disconnect it.
- Clean the appliance regularly, otherwise the grime that forms could be harmful to health and affect appliance performance. Unplug the appliance and allow it to cool before cleaning.
- Do not place the base of the Milk Frother in water or a dishwasher. Do not direct jets of water towards the bottom of the appliance or base. This can permanently damage the appliance and invalidate the warranty. Danger of electric shocks. The stainless steel milk container (jug) can be put in the dishwasher. The mixer and lid can be washed in warm water.
- Hold the appliance by the handle.
- The base supplied must only be used for its intended purpose.
- Always use the appliance with the lid in place.
- Keep these instructions.

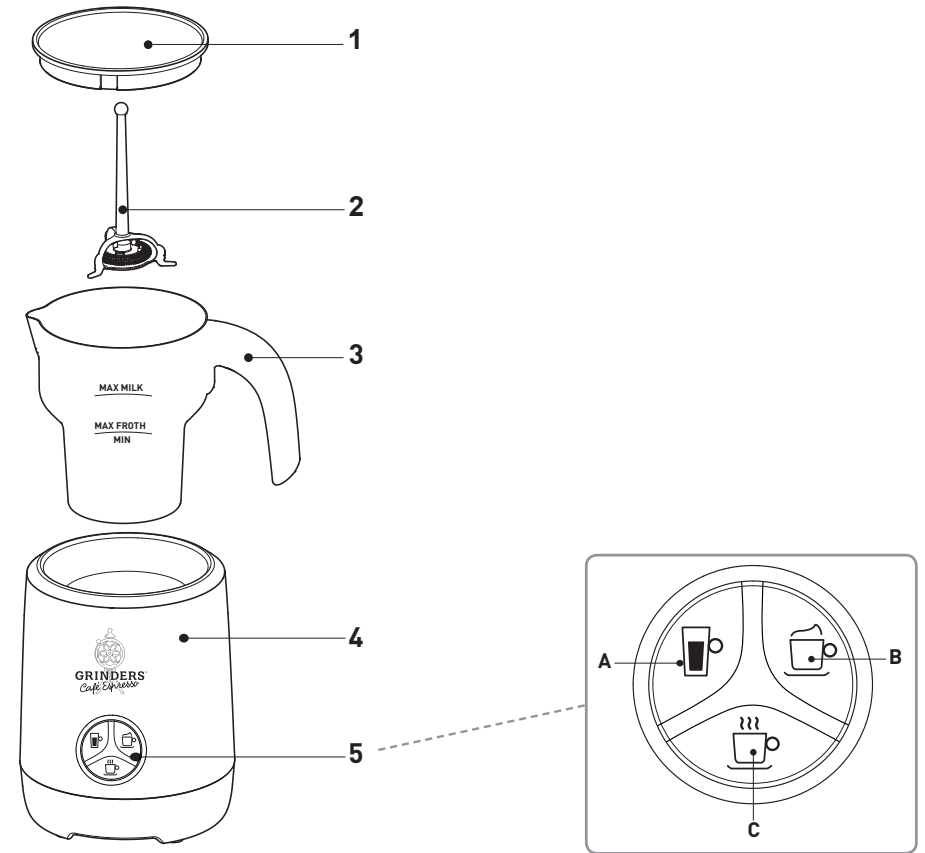

1. Lid
2. Mixer (support + whisk)
3. Milk container (jug)
4. Base
5. Keypad




- A. Latte Button
- B. Cappuccino Button
- C. Hot Milk Button

FIRST USE



- The appliance is equipped with a mixer accessory (consisting of support + whisk), which is to be used always, whatever the selected operation. Before using the Milk Frother, we suggest cleaning all parts (see Cleaning & Maintenance).
- Place the appliance on a flat surface.
- Insert the plug in a power socket. The appliance will beep.
- Remove the lid and place the mixer inside the milk container (jug).
- Fill the milk container (jug) with the recommended amount of milk, refit the lid, and place the milk container (jug) back into the base.

Note: For better froth, use milk straight from the refrigerator (approx. 3-5°C).

The appliance can be used for the following operations:

- Latte - press the latte button .
- Cappuccino - press the cappuccino button .
- Hot Milk - press the hot milk button .

ALARMS

The appliance has the Latte (white LED) , Cappuccino (white LED)  buttons lit up at the same time, as shown in figure 1, when:


- Any button is pressed and the milk container is not in the base.
- Any button is pressed and there is no milk in the container.
- Any button is pressed and the mixer is not inside the container.
- The milk container is removed from the base when the cycle has not finished.

Important note: To reset the alarm and return to operation status, press any button twice.

FROTHING - LATTE SETTING

- Fill the milk container (jug) with the required amount of milk, refit the lid, and place the milk container (jug) back into the base.

Note: To prevent milk overflowing after being frothed, the recommended maximum amount of milk must be below marked max milk (250 mL).

- Press the Latte button , the appliance will beep, the Latte button will light up white and the appliance will start. When the required temperature is reached, the appliance will stop, beep and all buttons will light up.

Note: Do not remove the milk container (jug) during normal operation. If you do need to stop the normal cycle in advance, press the Latte button  once.

Note: During the Latte mode operation, the Cappuccino and Hot Milk buttons are locked.


- When the appliance has completed its cycle, remove the milk container (jug), also remove the mixer and pour the hot frothed milk.
- Always switch the appliance off and disconnect it from the power supply when not in use.


Note: We recommend cleaning any residual milk from the appliance after each use, to safeguard health and prevent malfunctioning.

FROTHING - CAPPUCCINO SETTING

- Fill the milk container (jug) with the required amount of milk, refit the lid, and place the milk container (jug) back into the base.

Note: To prevent milk overflowing after being frothed, the recommended maximum amount of milk must be below marked max milk (180 mL). This is because frothed milk doubles or triples its initial volume.

- Press the Cappuccino button , the appliance will beep, the Cappuccino button will light up white and the appliance will start. When the required temperature is reached, the appliance will stop, beep and all buttons will light up.

Note: Do not remove the milk container (jug) during normal operation. If you do need to stop the normal cycle in advance, press the Cappuccino button  once.

Note: During the Cappuccino mode operation, the Latte and Hot Milk buttons are locked.


- When the appliance has completed its cycle, remove the milk container (jug), also remove the mixer and pour the hot frothed milk.
- Always switch the appliance off and disconnect it from the power supply when not in use.


Note: We recommend cleaning any residual milk from the appliance after each use, to safeguard health and prevent malfunctioning.

FROTHING - HOT MILK SETTING

- Fill the milk container (jug) with the required amount of milk, refit the lid, and place the milk container (jug) back into the base.

Note: To prevent milk overflowing after being frothed, the recommended maximum amount of milk must be below marked max milk (250 mL).

- Press the Hot Milk button , the appliance will beep, the Hot Milk button will light up blue and the appliance will start. When the required temperature is reached, the appliance will stop, beep and all buttons will light up.

Note: Do not remove the milk container (jug) during normal operation. If you do need to stop the normal cycle in advance, press the Hot Milk button  once.

Note: During the Hot Milk mode operation, the Latte and Cappuccino buttons are locked.

- When the appliance has completed its cycle, remove the milk container (jug), also remove the mixer and pour the hot frothed milk.
- Always switch the appliance off and disconnect it from the power supply when not in use.

Note: We recommend cleaning any residual milk from the appliance after each use, to safeguard health and prevent malfunctioning.

CLEANING & MAINTENANCE

- Always unplug the appliance and leave it to cool before cleaning it.
- Do not put the base in water.
- Only the stainless steel milk container can be put in the dishwasher.
- Remove the rubber gasket from the lid and wash them with warm water and mild detergent (Fig.3). Rinse thoroughly and dry. Refit the gasket on the lid.
- Remove the metal whisk from the support (Fig.4), wash them with hot water (NOT in a dishwasher) and refit.
- Clean the outside of the container using a damp cloth or a mild detergent.

Note: To prevent dulling, do not use abrasive detergents to clean the outside of the appliance.

FIG.1



FIG.2

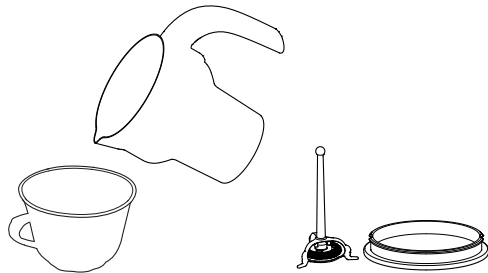


FIG.3


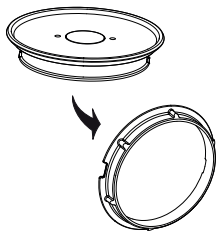


FIG.4

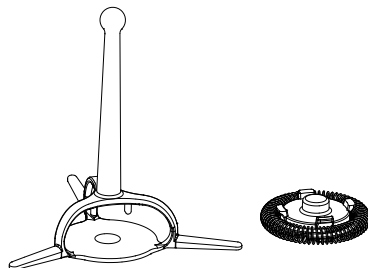

MILK FROTHER – WARRANTY DETAILS

WARRANTY DETAILS

Dear Customer,

Thank you for buying this product. This Milk Frother has been designed and produced using the best technologies available.

1. Warranty Details:

- (a) If your Grinders Café Espresso Milk Frother develops a fault or defect during the warranty period, and subject to the terms below, we will repair it or replace it.
- (b) We offer this warranty on top of any guarantees imposed by the Australian Competition and Consumer Act 2010 and any other applicable State or Territory legislation.
- (c) The warranty applies for 12 months from the date of purchase.
- (d) The warranty covers fault or defects in the product's materials or manufacturing.
- (e) The warranty does not cover:
 - (f) Misuse, or use other than in accordance with the product's instructions;
 - (g) Negligence on your part;
 - (h) Normal wear and tear;
 - (i) Faults or defects caused by third parties, including work done by unauthorised service or repair agents.

2. Making a Warranty Claim:

- (a) To make a claim you should first contact the Grinders National Sales Centre by telephone on 1300 476 377 in Australia and we will be able to provide you with the appropriate next steps for service or replacement of your Milk Frother.
- (b) Before contacting the Grinders National Sales Centre, please make sure you have carefully read the Instruction Manual supplied with the Milk Frother.
- (c) After you have initiated the claim via the telephone, we may ask you to return the product to us, as per the address details in Point 4.
- (d) You will need to provide your receipt as proof of purchase in order to make a claim under the warranty.
- (e) Once you return the product and lodge a claim with us, we will assess the claim and let you know whether it is covered. The decision whether to repair or replace a product is at our sole discretion unless there is a 'major failure' as defined under Australian Consumer Law.
- (f) If it is covered, we will deliver the repaired or replaced product back to you. We will bear this cost.
- (g) If it is not covered, we will deliver the product back to you and you will bear the transport cost.

3. General service and repair enquiries:

For general service and repair enquiries, please contact us on the telephone number below.

4. Contact details:

Grinders National Sales Centre
 Ph: 1300 476 377
 Imported by GRINDERS COFFEE HOUSE
 50 SPARKS AVE, FAIRFIELD, VIC 3078
 "GRINDERS" is a registered trade mark of Coca-Cola Amatil (Aust) Pty Ltd

5. Statutory Guarantees:

As well as the Grinders Café Espresso warranty, our goods come with guarantees that cannot be excluded under Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

6. Claim Details:

If you are making a claim under the warranty or the statutory guarantees, we will require the following information from you:

- (a) Name;
- (b) Address;
- (c) Product purchased;
- (d) Date of purchase;
- (e) Milk Frother Serial Number;
- (f) Shop of purchase;
- (g) Description of the problem.



QUICK, SAFE & INNOVATIVE

**AUTOMATIC MILK SETTINGS
FOR CAPPUCCINO & LATTE
STYLE DRINKS**

CAPPUCCINO

- Cappuccino Cup
- Automatic setting
- 180mL of fresh milk
- Chocolate powder

Makes a delicious
Cappuccino

CAFE LATTE

- Latte Glass
 - Automatic setting
 - 250mL of fresh milk
- Makes 2 lattes (150mL)

MACCHIATO

- Small Glass
 - 100mL of fresh milk
- Makes multiple
macchiatos



VISIT OUR ONLINE STORE: www.grinderscoffee.com.au

Grinders National Sales Centre Ph: 1300 476 377

"GRINDERS" is a registered trade mark of Coca-Cola Amatil (Aust) Pty Ltd

