


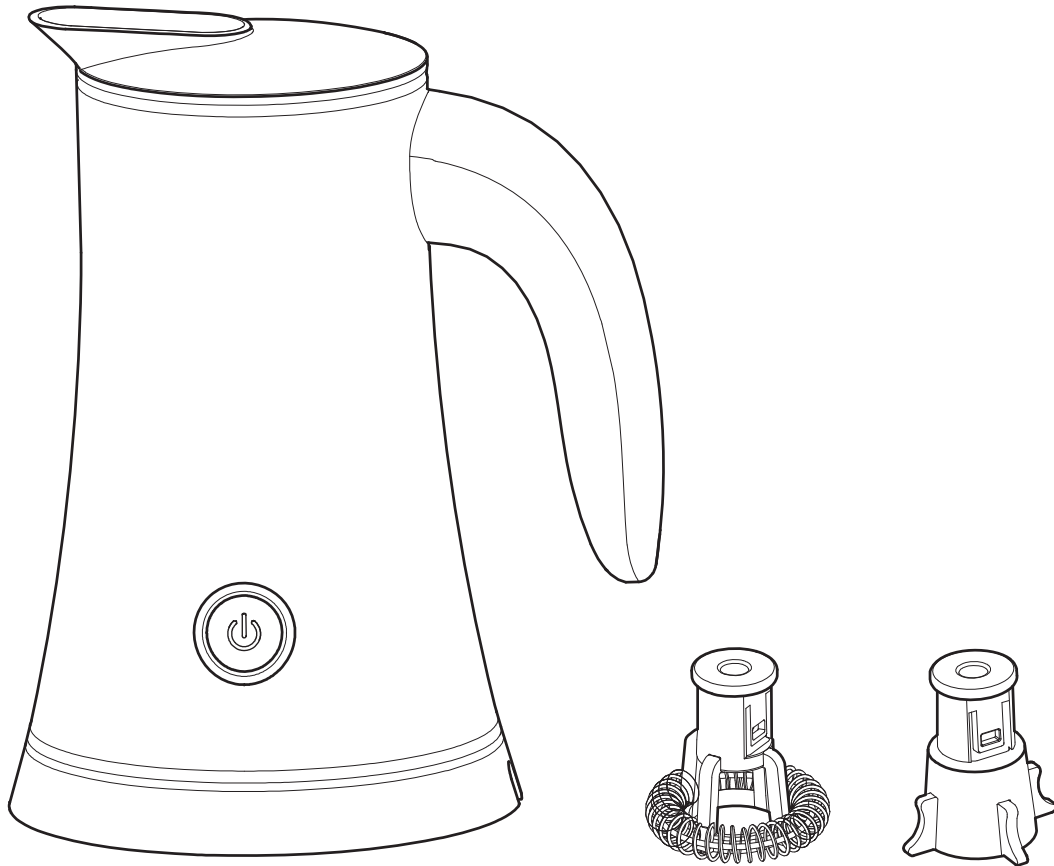

Model F02MK




**Imported by Maranatha Pty Limited
Unit 33 / 9 Hoyle Avenue, Castle Hill, N.S.W. 2154
Phone: 02 9894 6247**

**E-Mail: info@maranathaimport.com.au
Web Site Contact: www.maranathaimport.com.au**

Important safety instructions

1. Read all instructions before using.
2. Before connecting the appliance to the power supply, check that the voltage indicated on the appliance corresponds with the voltage in your home. If this is not the case, contact your dealer and do not use the frother.
3. The attached base can only be used for its intended function of milk frothing/heating.
4. Do not operate the appliance empty, to avoid damaging the heat elements.
5. Unplug from the outlet when not in use and before cleaning. Allow to cool before the adding or removal of any parts, and before cleaning the appliance.
6. Do not let the cord hang over the edge of a table or counter or touch a hot surface.
7. Do not place on or near a hot gas or electric burner or in a heated oven.
8. Ensure that the appliance is used on a firm and flat surface out of reach of children, this will prevent the appliance from overturning and prevent damage or injury.
9. Keep hands and utensils out of container while in use to reduce the risk of severe injury to persons or damage to the frother.
10. To protect against a fire, electric shock or personal injury, do not immerse cord, electric plugs, jar or base in water or other liquids.
11. Close supervision is necessary when any appliance is being used by or near children.
12. Do not touch the hot surface. Use the handle or the button.
13. Extreme caution must be used when moving an appliance containing hot water.
14. Avoid contacting moving parts.
15. The use of attachments not recommended or sold by manufacturer may cause fire, electric shock or injury.
16. Do not operate any appliance with a damaged cord or plug, after the appliance malfunctions, or is dropped or damaged in any manner. Return the appliance to your store of purchase or contact the **Maranatha Customer Service line 02 9894 6247**.
17. The appliance should only be used for frothing and heating milk. Do not use the appliance for any other function
18. This appliance has been incorporated with a grounded plug. Please ensure the wall outlet in your house is well earthed.
19. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, lack of experience and knowledge, unless proper supervision or instruction is given concerning use of the appliances by a person responsible for their safety.
20. Always operate the appliance with cover in place.
21. Never place this appliance on or near a hot gas or an electric burner or anywhere it could touch a heated appliance.
22. This appliance is intended for Domestic use only
23. Children should be supervised to ensure that they do not play with the appliance.
24. Do not use outdoors.
25. Save these instructions.

Know your milk frother

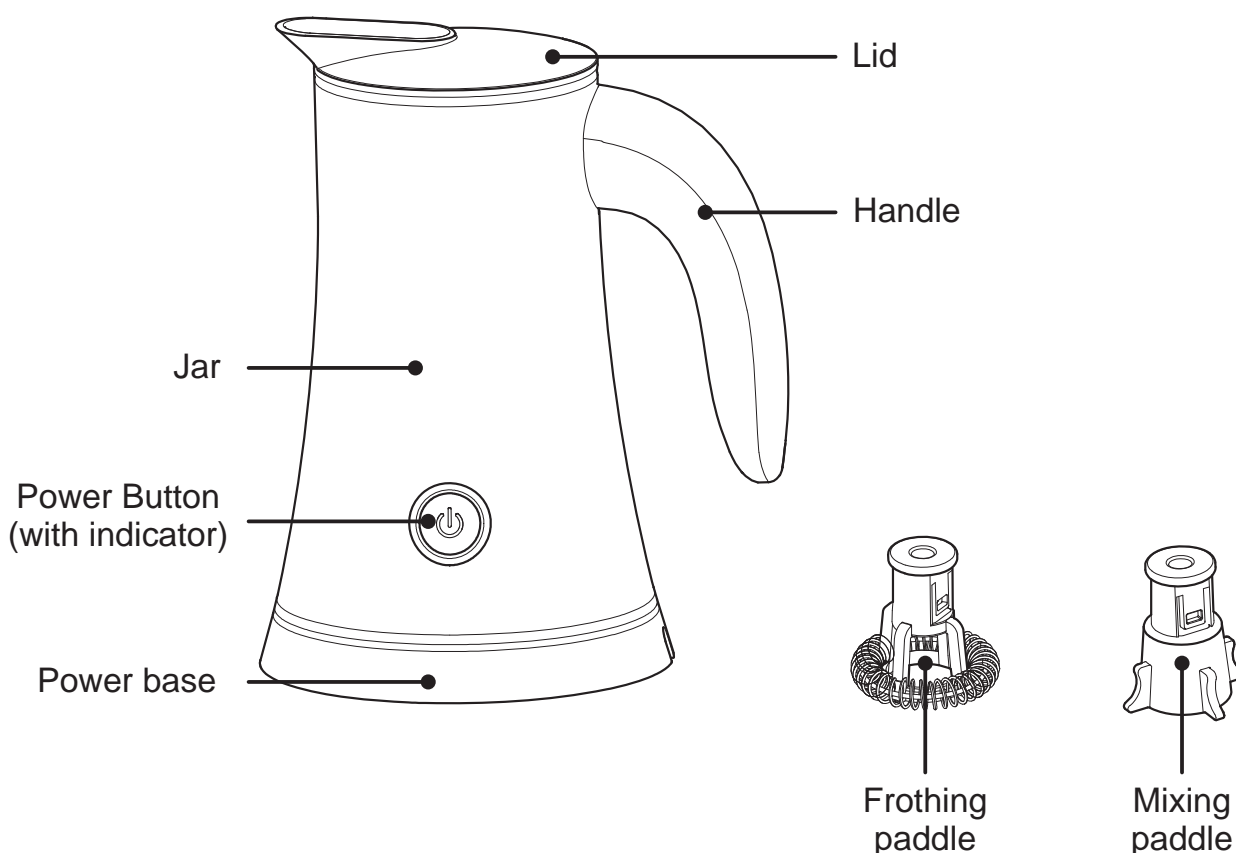

Before the first use

The appliance can be used for finishing the following tasks separately:

I. frothing and heating milk;

II. only frothing separately, without heating;

III. only heating separately, without frothing.

1. Before using your milk frother, clean all the parts according to the section "CLEANING AND MAINTENANCE".
2. Important: do not wash any parts in the dishwasher, and do not immerse the jar in water. This may permanently damage the product and void the warranty.
3. The appliance is equipped with two accessories of mixing paddle and frothing paddle, the mixing paddle is used for mixing milk during heating to prevent from sticking. The frothing paddle is used for frothing milk during heating or is used for frothing separately, but no heating. Select desired accessory according to your task.

NOTE: *the max capacity of the jar is 450ml.*

Operation of your milk frother

I. Frothing and heating

1. Place the appliance on a flat surface.
2. Select frothing paddle, then open the lid and insert the frothing paddle onto the shaft on the bottom of jar.
3. Fill the jar with the desired amount of milk, and replace the lid, observing fill lines

Note: *the max milk quantity permitted to add is 100ml, to avoid milk overflowing after frothing.*

4. Place the jar on the power base and connect the plug into a power outlet, the indicator light will turn red.
5. Press the power button once, the indicator light will turn blue. Then the appliance will start to work. Once the temperature of milk has achieved approximately 68 Degrees, the heating element will stop heating and the frothing paddle will stop rotating automatically; the indicator will illuminate red again until unplugging the power outlet.

Note: *During operation, you can stop operating by pressing the power button once.*

6. When the appliance has stopped operating, pour out the warmed and frothed milk to enjoy it.

Caution: A minimum of 3 minutes rest time must be maintained between cycles. Otherwise after 5 continuous cycles continuously the appliance will enter self protection mode. When this occurs, the indicator light will illuminate and flash blue. In addition the power button will not be activated.

After Approximately 5 minutes the appliance will enter standby mode and the machine is then ready for use.

7. Always turn off the milk frother and disconnect the power supply when not use

II. Only frothing separately, without heating.

1. Following steps 1-4 in the section of "Frothing and heating".
2. Press the power button three times continuously within 2 seconds, the indicator light will illuminate blue and flash, the frothing paddle will then rotate for frothing milk separately, but the heating element will not heat. The appliance will automatically stop rotating after operating. The indicator light will illuminate red again until unplugging the power outlet.

Note: *During operation, you can stop frother by pressing the power button once.*

3. When the appliance has stopped operating, pour out the frothed milk and enjoy it.

Caution: A minimum of 3 minutes rest time must be maintained between cycles. Otherwise after 5 continuous cycles continuously the appliance will enter self protection mode. When this occurs, the indicator light will illuminate and flash blue. In addition the power button will not be activated.

After Approximately 5 minutes the appliance will enter standby mode and the machine is then ready for use.

4. Always turn off the milk frother and disconnect the power supply when not use.

III. Only heating separately, without frothing.

1. Place the appliance on a flat surface.
2. Select mixing paddle according to your task. Then open the lid, insert the mixing paddle onto the shaft on the bottom of jar.
3. Fill the jar with the desired amount of milk, observing fill lines and replace the lid.

Note: *the max milk quantity permitted to add is 200ml, to avoid milk overflowing after mixing or frothing.*

4. Place the jar on the power base and connect the plug into a power outlet. The indicator light will illuminate red.
5. Press the power button twice continuously within 2 seconds, the indicator light will turn blue. Then the appliance will start to work. Once the temperature of milk has achieved approximately 68 degrees, the heating element will stop heating and the mixing paddle will stop rotating automatically; the indicator light will illuminate red again until unplugging the power outlet.

Note: *The rotation of mixing paddle is only used for avoiding sticking. It will not froth the milk.*

6. When the appliance has stopped operating, pour out the warm milk and enjoy it.

Caution: A minimum of 3 minutes rest time must be maintained between cycles. Otherwise after 5 continuous cycles continuously the appliance will enter self protection mode. When this occurs, the indicator light will illuminate and flash blue. In addition the power button will not be activated.

After Approximately 5 minutes the appliance will enter standby mode and the machine is then ready for use.

7. Always turn off the milk frother and disconnect the power supply when not use.

Cleaning and maintenance

Always disconnect the appliance from the power outlet and allow it cooling down before cleaning.

Caution: Never immerse the jar, power base in water, or allow moisture to contact with these parts.

1. Wash lid with water and mild detergent. (The lid is not dishwasher safe component)
Rinse thoroughly and dry.
2. Remove the mixing paddle and/or frothing paddle, and wash them completely in warm water.
3. Wash the inner of jar with a combination of a mild detergent and water and then wipe clean with a soft damp cloth.
4. Wipe the appearance of jar with a soft damp cloth or cleaner, never use a poisonous cleaner.

Note: Do not use chemical, steel, wooden or abrasive cleaners to clean the outside of the appliance to prevent the loss of the gloss appearance.

Environment friendly disposal



You can help protect the environment!
Please remember to respect the local regulations:
hand in the non-working electrical equipments to an
appropriate waste disposal center.

Handwriting practice lines consisting of 18 horizontal rows. Each row is defined by a solid top line, a dashed midline, and a solid bottom line, providing a guide for letter height and placement.



IB0000200 - Rev.00 del 24-07-12